





CONVECTION HEATER Installation Instructions

FRONT VIEW

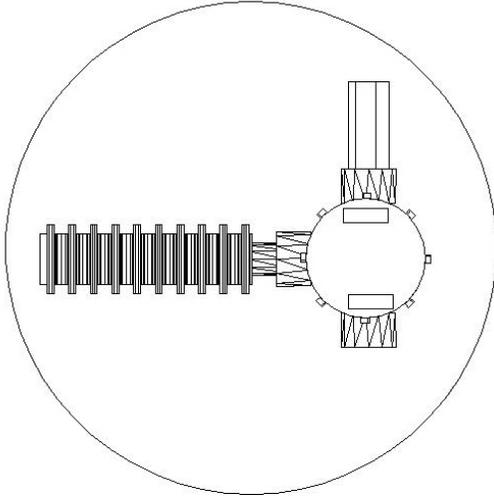


BEST

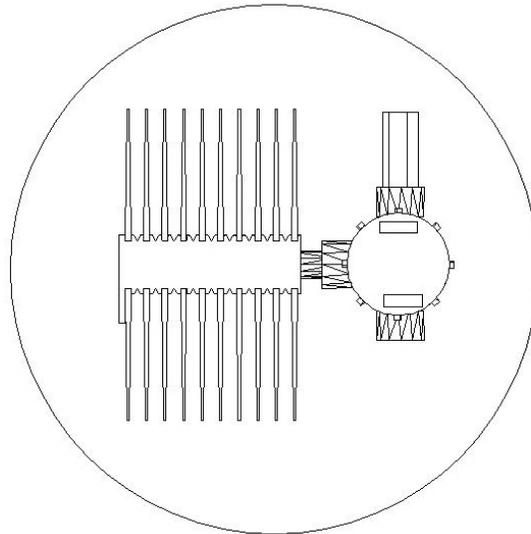

OK, but 25% less heat

Installation Instructions

1. Assemble the heater, junction box and thermostat as required by installation arrangement needs. The thermostat must be installed horizontal or vertically up.
2. Fins of the heater **must always be vertical to the horizontal!**
3. Ensure a minimum of 4 to 6" directly above and 1 to 2" below the fins for air circulation.
4. Heater assembly must be located 2 to 3" from the bottom of the enclosure, preferably in a lower corner.
5. Remember, this is a **convection** heater and it relies on airflow through the fins for correct operation.

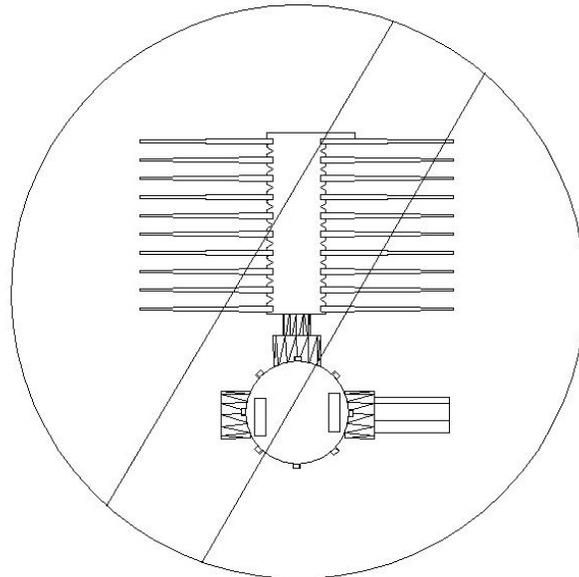

NEVER, NEVER THIS WAY

IMPORTANT, for temperatures over 85 F (30 C) contact the factory